



User Manual

TABLE OF CONTENTS

Warranty Information	2
1. General Description of Hardware	3
1.1 Screen Display Description	3
1.2 Basic Specifications	4
1.3 Accessories List	5
1.4 Attaching Belt Clip	6
1.5 Charging Instructions	6
2. Getting Started	7
2.1 Start Menu	7
2.2 Power Off	7
3. Using Swami on the Course	8
3.1 Course Selection	8
3.2 Play Mode	8
3.3 Hazard Screen.....	9
3.4 Shot Distance	9
3.5 Editing Green Distances	10
4. Swami Settings	11
4.1 Backlight Control	11
4.2 Unit - Meter/Yard	12
4.3 Language	12
4.4 Time Format	13
4.5 Set Time	13
4.6 Daylight Saving Time	14
4.7 Model Info	14

Caution	15
About GPS	16
Using Conditions	16
Questions & Answers	17
Registration Card	18

Thank You for Choosing Swami 4000+

Compact design and a user friendly interface allow the Swami 4000+ to be your best electronic caddy, which can help you to play more strategically and manage shot distances more efficiently. In order to ensure the best performance of the product and maximize its service life, please read these instructions before using your Swami 4000+.

Warranty / Return Policy

The SWAMI 4000+ is warranted to be free from defects for up to (1) year from your purchase date. Software updates are free of charge. IZZO will replace any defective unit within the warranty period. Please call Swami Support at 800-777-7899 to request a Return Authorization. All defective product must be returned to:

IZZO Golf
1635 Commons Parkway
Macedon, NY 14502

Please include a note with your Name, Address, Phone # and the Return Authorization #. Your replacement SWAMI 4000+ will be shipped once we receive and diagnose the returned unit.

1. General Description of Hardware

1.1 Screen Display Description



Key Description:

- **Enter / Power Key:** Hold to power on, press to select options.
- **Page Key:** Press to toggle between distances to Green or Hazards in **Play Mode**
- **Up Key:** Scroll Up
- **Down Key:** Scroll Down

1.2 Basic Specifications

Number of courses stored	30,000+ Worldwide
Satellite Location Time	
Hot Start (last used less than 1 hour)	< 30 seconds
Warm Start (last used less than a few hours)	< 1 minute
Cold Start (first time use or rarely used)	< 3 minutes
Power	
Battery Type	Rechargeable Lithium Battery (1100mAh)
Duration of Full Charge	About 8-10 hours
Charging Time	About 4-5 hours
Interface	
USB interface, accessible to computer	Yes
Dimensions	Length 3.8" x Width 2" x Thickness 0.8"
Weight	About 3.17 oz
Display Size	1.8 Inches
Water Resistant	Yes, IPX6
Operation Temperature Limits	32°F to 130°F

1.3 Accessories List

Please confirm that your Swami 4000+ package contains the following items:



USB Cable



Belt Clip



Protective Case

* If any item is missing, please contact IZZO Golf.

IZZO Golf
1635 Commons Parkway
Macedon, NY 14502
www.swamigps.com
1-800-777-7899

1.4 Attaching Belt Clip

- Attach black gear shaped piece to the back of the Swami 4000+ using one of the included screws (other screw is a spare). Do not over tighten or threads will be stripped and the connection will become loose.
- Once attached, slide black gear shaped piece into the slot on the front of the belt clip until it clicks and locks into place.
- To remove the Swami 4000+ from the belt clip, push down on the release button located on the top of the belt clip.

1.5 Charging Instructions

- Insert one end of the USB cable into the connection port under the back rubber cover on the back of the device. Then insert the other end of the cable into a USB port or AC adapter (not included).
- The Swami 4000+ needs about 4-5 hours to charge a fully depleted battery.
- The battery can be charged before being completely drained, but please do not charge it excessively.
- The most efficient charging method is to charge the battery while the device is powered off.
- While unit is powered off the screen display will show a battery icon with bars pulsating. When the bars stop pulsating, unit is fully charged.

2. Getting Started

2.1 Start Menu



Press and hold **[Enter]** key for 3 seconds until the power is on. Three options will show on the **Start Menu: Play, Settings** and **Power Off**. You can scroll up or down by pressing the **[Up]** and **[Down]** keys. To select desired option, press the **[Enter]** key. To return to the **Start Menu** screen at any time, press and hold **[Enter]** for a few seconds.

2.2 Power Off



To turn the unit off, use the **[Up]** and **[Down]** keys to select **Power Off** then press and release the **[Enter]** key.

3. Using Swami on the Course



3.1 Course Recognition

River Run Gc
Brookwood Country Cl
Green Island Gc
Pineway Gc

After you turn on your unit, select the **Play** option from the **Start Menu** and press **[Enter]**. The Swami 4000+ will search for surrounding courses that the device supports. When the device has found the courses, it will list them. Use the **[Up]** and **[Down]** keys to select your golf course, then press the **[Enter]** key.

*(Note: First time use may take several minutes to locate the satellite, please reference **Satellite Location Time** in the **Basic Specifications** chart on page 4).*

3.2 Play Mode

 
		
Front	Back	
158	178	
Center		
168_Y		
3₁	8:30 am	P4

Press the **[Up]** and **[Down]** keys if you need to change the hole number. **Play Mode** will now display the distance to the Front, Center and Back edge of the green for the current hole.

Auto Hole Advance*: Swami 4000+ will automatically switch to the next hole without the use of the **[Up]** and **[Down]** keys.

**This feature will only work if the Swami is physically brought onto the putting green for each hole. The Swami recognizes that you have finished your current hole and will switch to the next hole automatically. If the Swami is not brought onto the putting surface, user will need to manually switch to next hole.*

3.3 Hazard Screen

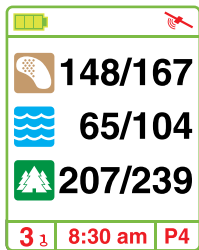

Hazard Screen will display layup and carry distances to bunkers, water hazards, and doglegs. While in **Play Mode**, press the **[Page]** key to access the **Hazard Screen**. To return to **Play Mode** screen (distances to green) Press **[Page]** again.



Bunker



Water



Dogleg

65/104

Distance to
Layup/Carry

3.4 Shot Distance

 


Shot Distance Mode allows the user to measure the distance of each shot. While at the **Play Mode** screen, press **[Enter]** to access **Shot Distance Mode**.

After hitting a shot, hold the **[Page]** key for several seconds to set the starting point (value will be reset to 0). As you travel to your ball, the distance from your starting position will begin to calculate and will be displayed on the screen. Press **[Enter]** to hold (pause) the calculation.

To start a new measurement, press the **[Enter]** key to release from hold (pause). Then press and hold the **[Page]** key to reset the value to 0.

3.5 Editing Front, Center & Back Green Locations

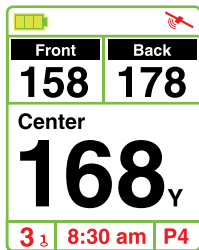


To make changes to the Swami 4000+ green distances, you must be on the hole you would like to edit. To begin, press and hold the **[Page]** key for 3 seconds while on the **Play Mode** screen. The top of the screen will read “**Map**” while editing the green distances.

1. Use the **[Up]** and **[Down]** keys to select the **Front**, **Center** or **Back** of green. (*Note: The yardage of the front, center or back of the green will begin blinking when selected*).
2. Next, stand with the Swami 4000+ at the point of new green location. (*Example: If you are editing the front of the green, stand with the Swami 4000+ at the point you wish to mark as the new front of the green*).
3. Press **[Enter]** key while standing at the new position of the green. A pop up message asking “**Map New Front?**” will appear. Then press **[Enter]** to select “**OK**” confirming the new location.




The new location where the GPS unit is located should read “0” yards. (*Example: If you edited the front of the green, you are now standing 0 yards between you and the front of the green*). This change will be saved on your Swami 4000+ for future use.

 4. Swami Settings

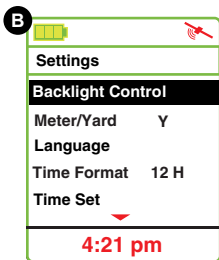


From the **(A) Start Menu**, use the **[Up]** and **[Down]** keys to select **Settings** and press **[Enter]** key to access **(B) Settings Menu**.

 4.1 Backlight Control

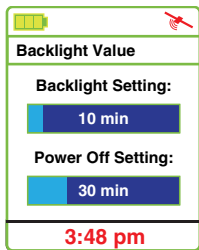


The Swami 4000+ features auto backlight and power off function to save power. If you don't touch any key for a specific time period, the screen will turn dark automatically. Select the **Backlight Control** option on the **Settings Menu** and press the **[Enter]** key. Use the **[Up]** key to edit the backlight duration. Use the **[Down]** key to edit the power off duration. To return to the **Settings Menu** screen, press the **[Enter]** key.

 4.2 Unit - Meter/Yard

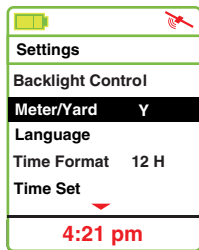

The Swami 4000+ allows users to change the unit of measure between yards or meters. Select the **Meter/Yard** option on the **Settings Menu** then press **[Enter]** to change the unit of measure. (*Note: Y = Yard and M = Meter*). When desired option is selected, press and hold **[Enter]** key for a few seconds to return to the **Start Menu**.

 
4.3 Language

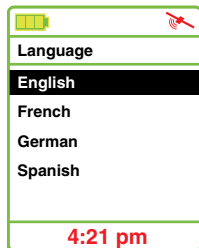

To change the language of the device, select the **Language** option in the **Settings Menu**. Use the **[Up]** and **[Down]** keys and scroll to the desired language, then press the **[Enter]** key to select it.


The following languages are available:
(*English, French, German, Spanish*).

 4.4 Time Format

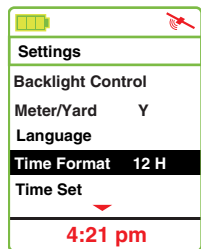


The Swami 4000+ provides two **Time Format** options. You can choose from 12 Hour or 24 Hour. To edit, use the **[Up]** and **[Down]** keys to select **Time Format** from the **Settings Menu**. Press the **[Enter]** key to change between 12H and 24H. Press and hold the **[Enter]** key to return to the **Start Menu**.

 4.5 Time Set

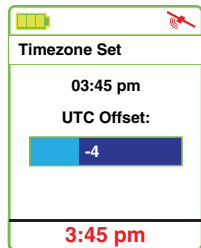


The Swami 4000+ will set the time automatically according to your location and relevant data of GPS satellites; but you can manually adjust the time by hour. Select **Time Set** from the **Settings Menu**. You can increase or reduce the time with the **[Up]** and **[Down]** keys. Press **[Enter]** when finished.

 4.6 Daylight Saving Time

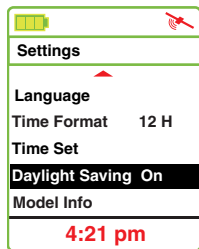

The Swami 4000+ allows the user to toggle **Daylight Saving Time** feature On or Off. To edit, use the **[Up]** and **[Down]** keys to select **Daylight Saving** from the **Settings Menu**. Press the **[Enter]** key to change between On or Off. Press and hold the **[Enter]** key to return to the **Start Menu**.

 4.7 Model Info

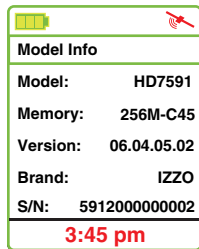

To view the Swami 4000+ model information, select **Model Info** from the **Settings Menu** screen. There you can view the *(Model Number, Memory, Version, Brand and Serial number)* of the unit. To return to the **Settings Menu** screen, press the **[Enter]** key.

CAUTION

Global Position System (GPS) was developed and is managed by the United States Department of Defense (DOD) which is responsible for its normal operation and position precision control; the U.S. is entitled to affect function or position precision of the whole system without prior notification or announcement based on its political considerations or safety of national defense.

In order to use the SWAMI 4000+ correctly and safely, you must be aware of the following information prior to operating the device:

- The SWAMI 4000+ was only designed for the purpose of leisure and recreation and is not applicable for industrial or special measurement.
- The SWAMI 4000+ is only an auxiliary device. IZZO Golf will not accept any legal liability for accidents due to mistaken operation, or any use of the SWAMI 4000+ for measurement.
- Please do not try to disassemble the SWAMI 4000+ or repair any part of the device discreetly.
- Please do not store the SWAMI 4000+ in places exposed to direct sunlight or in extremely high temperatures.

About GPS

Global Position System (GPS) is a satellite system developed by the U.S. Department of Defense. GPS consists of 32 satellites that circle the earth and are 11,000 miles away from the ground. These satellites make two circles of the earth per day and emit signals of extremely low power which will be received and recorded by 5 ground stations. These ground stations will use precise time signals to confirm accurate positions of each satellite. Your GPS receiver can receive signals sent out by these satellites. An accurate latitude and longitude location can be determined when fixed upon at least 4 satellites.

WAAS (Wide Area Augmentation System) can enhance the precision of GPS. It was designed by the Federal Aviation Administration and is mainly used to enhance precision of GPS on an airplane. WAAS has extra ground stations in select positions which can work together with a master console to improve accuracy of satellite signals and reduce errors to about 3 yards.

Using Conditions

As Swami 4000+ uses GPS, it is available only in the places that can receive satellite signals, excluding places indoor or in water.

QUESTIONS & ANSWERS

Situations	Possible Problems	Solutions
The device cannot be started	A. Battery voltage is too low. B. You didn't press and hold the [Enter] key for 3 seconds.	A. Charge the battery. B. Press and hold the [Enter] key until the power is on.
The device will not power off	A. Holding down the [Enter] key instead of pressing and releasing the [Enter] key.	A. Press and release the [Enter] key to select Power Off option.
The device cannot detect satellites	A. Time for accessing satellite signal is not enough. B. The device is being started indoors.	A. Check whether the satellite icon keeps blinking; if it stops blinking, the satellite location has been fixed. B. Keep the device in an open space without obstructions.

If you have any other questions or concerns, please contact:

U.S. and Canada: 1-800-777-7899 or email sales@izzo.com

U.K. and Ireland: +44 1342 836376 or email sales@skymaxsport.co.uk

Continental Europe: +31 77478294 or email info@approachgolf.nl

Australia: +61 3 5277 3977 or email jared@golfimports.com.au



REGISTER YOUR SWAMI 4000+

FILL OUT THE INFORMATION BELOW OR GO TO
WWW.SWAMIGPS.COM/REGISTRATION

NAME: _____

ADDRESS: _____

EMAIL: _____

PHONE: () _____

DATE PURCHASED: _____ / _____ / _____





**MAIL TO: IZZO GOLF
1635 COMMONS PARKWAY
MACEDON, NY 14502-9191**

[PLEASE PLACE INSIDE ENVELOPE]

